

# Heavy Industrial • RS232 Communication

Linear Position/Velocity to 1700 inches (4300 cm) Stroke Range Options: 0-600 to 0-1700 inches **VLS Option To Prevent Free-Release Damage IP68 • NEMA 6 Protection** 

#### **GENERAL**

Full Stroke Range Option	s (on this datasheet)	0-600 to 0-1700 inches
Electrical Interface		RS232
Format		HEX
Accuracy		± 0.10% full stroke
Repeatability		± 0.02% full stroke
Resolution		± 0.003% full stroke
Measuring Cable	stain	less steel or thermoplastic
Enclosure Material	powder-painted alum	num or 303 stainless steel
Sensor	plastic-hybri	d precision potentiometer
Potentiometer Cycle Life		≥ 250,000 cycles
Maximum Retraction Acc	eleration	see ordering information
Maximum Velocity		see ordering information
Weight, Aluminum (Stain	less Steel) Enclosure	14 lbs. (28 lbs.), max.


### **ELECTRICAL**

Input Voltage	922 VDC
Input Current	40 mA
Baud Rate	9600 (selectable to 38.4K)
Update Rate	32 msec

### **ENVIRONMENTAL**

Enclosure	NEMA 4/4X/6, IP 67/68
Operating Temperature	-40° to 200°F (-40° to 90°C)
Vibration	up to 10 g to 2000 Hz maximum




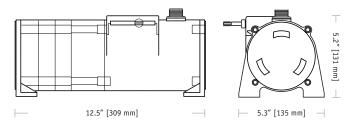

The PT9232 delivers position feedback via RS232 serial communication to your data acquisition or controller system. The PT9232 sends a raw 16-bit count from 0000H to FFFFH. Additionally this device can be set to continuously send data or send data only when polled.


As the internal position sensing element is a precision potentiometer, this transducer maintains current accurate position even during power loss and does not need to be reset to a "home" position.

### Output Signal:



### I/O Format

#### **Data Format**



#### **Data Frame**

#### 6 byte Hex string:

STX	CMD	B <sub>0</sub>	B <sub>1</sub>	B <sub>2</sub>	ETX	
<b>STX</b> = 0x02	CMD = Con	nmand Code*	Bn - B2 =	Data Field*	<b>ETX</b> = 0x03	

-see below

Important! All communications to/from the transducer are in HEX!

#### **User Commands:**

		User Cor	nmand			Sensor F	Response	
Description	<cmd></cmd>	<b<sub>0&gt;</b<sub>	<b<sub>1&gt;</b<sub>	<b<sub>2&gt;</b<sub>	<cmd></cmd>	<b<sub>0&gt;</b<sub>	<b<sub>1&gt;</b<sub>	<b<sub>2&gt;</b<sub>
Get Sensor Info	0x05	0x00	0x00	0x00	0x05	version <sup>(4)</sup>	date <sup>(5)</sup>	date <sup>(5)</sup>
Get Serial Number	0x15	0x00	0x00	0x00	0x15	se	rial number <sup>(</sup>	3)
Start Continuous Data	0x25	0x00	0x00	0x00	0x25	0x00	0x00	0x00
Stop Continuous Data	0x35	0x00	0x00	0x00	0x35	0x00	0x00	0x00
Get Position Data	0x45	0x00	0x00	0x00	0x45	$CMC^{(1)}$	$CMC^{(1)}$	status <sup>(2)</sup>

### (1)CMC - Current Measurement Count (Position)

The Current Measurement Count (CMC) is the output data that indicates the present position of the measuring cable.

The CMC is a 16-bit value that occupies the first two bytes ( $B_0$  and  $B_1$ ) of the data field.  $B_0$  is the MSB (most significant byte) and  $B_1$  is the LSB (least significant byte).

The CMC starts at 0000H with the measuring cable fully retracted and continues upward to the end of the stroke range stopping at FFFFH. This holds true for all ranges.

### (2)Status

The status byte is used as a flag to indicate the validity of the position signal that the internal electronics receives from the potentiometer.

Flags are as follows: 0x00 = GREEN, 0x55 = YELLOW, 0xAA = RED

A "green" flag shows everything OK. A "yellow" or "red" flag indicates that the sensor has either been extended beyond its range or that there is a problem with the potentiometer.

### (3)Serial Number

Each sensor has it's own unique serial number. This information can be retrieved by sending the sensor the "Get Serial Number" command.

The serial number is a 3 byte value from which ranges from 0 to 9999999 (decimal).

#### (4)Version

This is a single byte value (0-255 decimal) which indicates the currently installed firmware version of the sensor.

### (5) Date

This is a 2 byte value showing the date of currently installed firmware. This value ranges from 01011 - 12319 (decimal). Format is MMDDY. While the month and day are expressed as two digit numbers the year is expressed in a single digit only.

Example: 08054 = August 5, 2004

#### **Baud Rate**


The baud rate can be set using switches **7** & **8** on the 8-pole DIP switch found on the rs232 controller board located inside the transducer.


DIL-1	DIL-0	Dauu Tate
0	0	9600
1	0	19200
0	1	38400
1	1	9600



#### RS232 Controller Board and DIP Switch Location

# baud rate switches







internal dip switches & controller board

controller board, remove four Allen-Head Screws and remove end cover bracket.




### Outline Drawing

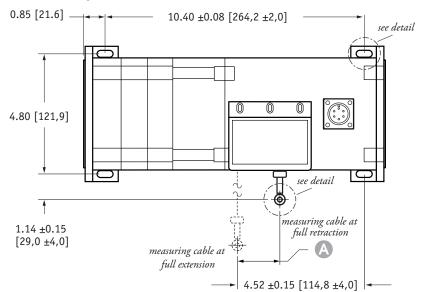




#### A DIMENSION

RANGE	inches [mm]
600	1.76 [44,7]
800	1.58 [40,1]
1000	1.98 [50,2]
1200	1.98 [50,2]
1500	1.86 [47,2]
1700	2.11 [53,6]

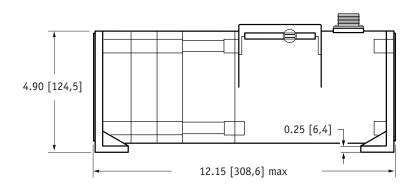

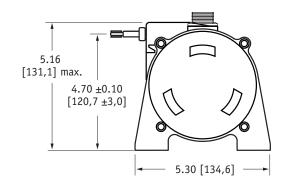

DIMENSIONS ARE IN INCHES [MM] tolerances are 0.03 IN. [0.5 MM] unless otherwise noted.

### Ordering Information:

## **Model Number:**



Sample Model Number:

**@** electrical connection:

PT9232 - 1200 - AL - FR - M6

1200 inches R range: enclosure aluminum B cable exit: front (horizontal)

# Full Stroke Range:

R order code:	600		800		1000		1200		1500		1700
full stroke range, min:	600 in.	:	800 in.	:	1000 in.	:	1200 in.	:	1500 in.	:	1700 in.
cable tension (±35%):	27 oz.	:	24 oz.	:	20 oz.	:	19 oz.	:	18 oz.	:	17 oz.
	.034-in. dia.	:	.019-in. dia.		.019-in. dia.		.019-in. dia.	:	.014-in. dia.		.014-in. dia.
measuring cable:	nylon-coated		nylon-coated		nylon-coated	:	nylon-coated		nylon-coated		nylon-coated
	stainless	:	stainless								

6-pin plastic connector


<sup>\*</sup> tolerance = +.005 -.001 [+.13 -.03] \*\* tolerance = +.005 -.005 [+.13 -.13]


#### Ordering Information (cont.):

### **Enclosure Material:**

<b>A</b> order code:	AL	SS
enclosure material:	powder-painted aluminum	303 stainless steel
max. acceleration:	1g	.33g
max. velocity:	60 inches/sec.	20 inches/sec.

#### Cable Exit:

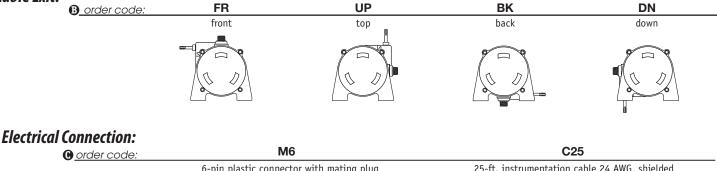

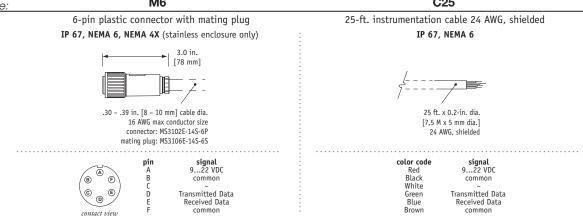

# **VLS Option** - Free Release Protection

The patented Celesco Velocity Limiting System (VLS) is an option for PT9000 Series cable extension transducers that limits cable retraction to a safe 40 to 55 inches per second for the single spring option and 40 to 80 inches per second for the higher tension dual spring option.

The VLS option prevents the measuring cable from ever reaching a damaging velocity during an accidental free release. This option is ideal for mobile applications that require frequent cable disconnection and reconnection. It prevents expensive unscheduled downtime due to accidental cable mishandling or attachment failure.

How To Configure Model Number for VLS Option:



creating VLS model number (example)...

1. select PT9232 model PT9232-0100-111-1110

2. remove "PT" from the model number  $\bigcirc$  9232-0100-111-1110

3. add "VLS" VLS + 9232-0100-111-1110

4. completed model number ! VLS9232-0100-111-1110

version: 7.0 last updated: July 18, 2014



tel: 800.423.5483 • +1.818.701.2750 • fax: +1.818.701.2799